




PVC AND PLASTICIZER FREE SKIRTING

- PVC free skirting for Enomer®-floor coverings
- Completely plasticizer free production technology
- Phthalate free
- Easy to install
- Manufactured in Finland

INSTALLATION INSTRUCTIONS

The moulding is fitted on the floor surface after installation. Fit the mouldings on the prepared surface using a suitable tape or contact adhesive (double-sided glueing). When using the tape, 55 mm tape is first attached to a wall. Do not stretch the list unnecessary. Any possible extension joints are carefully made using a butt joint.

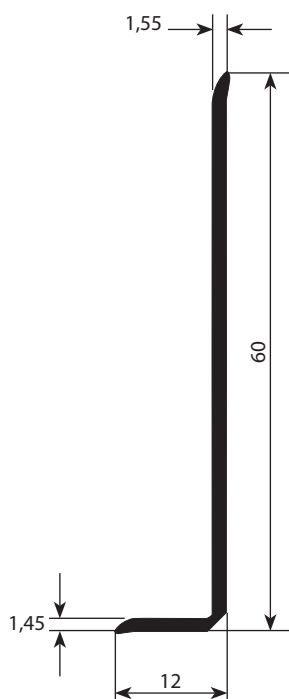

COLOURS

